

# HONDA

## INSTALLATION INSTRUCTIONS

Accessory

**ALARM**  
P/N 08E72-K1Z-J10

Application

**ADV350A**

Publication No.


**MII**

Issue Date

**November 2021**

**Honda Dealer: Please give a copy of these instructions to your customer.**

### PARTS LIST

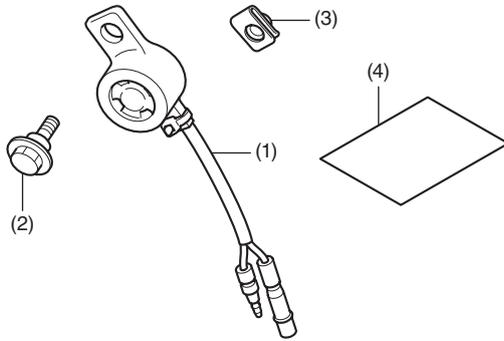

No.	Description	Qty
(1)	Buzzer	1
(2)	6 mm bolt	1
(3)	Clip nut	1
(4)	URL paper	1

### TOOLS AND SUPPLY REQUIRED

Socket (10 mm)  
Ratchet  
Electrical tape  
Torque wrench

### TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm bolt	12	1.2	9

### INSTALLATION


#### ▲ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


#### NOTE:

- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memories of the clock will be erased when you disconnect the battery. Reset the memories after reconnecting the battery.
- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.
- Setting is necessary after installing this accessory.


- Open the seat.
- Remove the battery lid as shown, and disconnect the negative (-) cable of the battery.

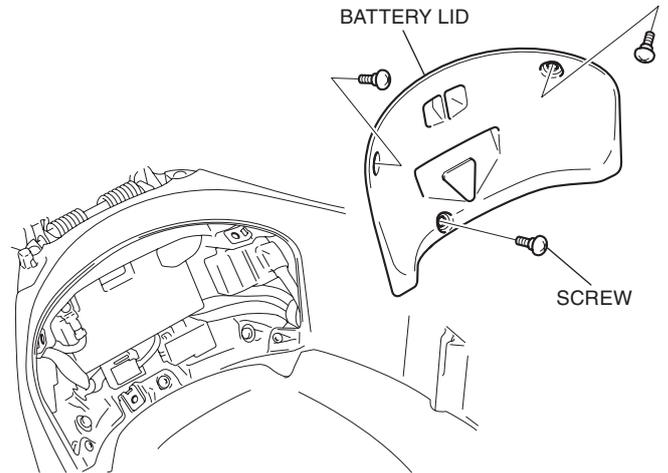


- Remove the right front side cover B as shown.  
<Right side>

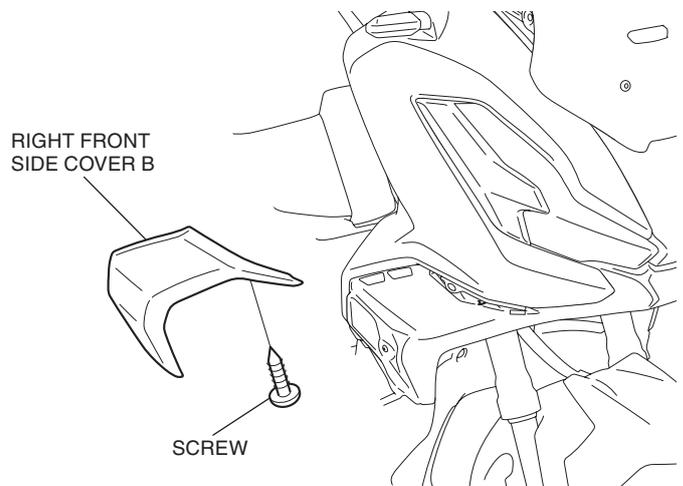


- Remove the clips as shown.  
<Right side>

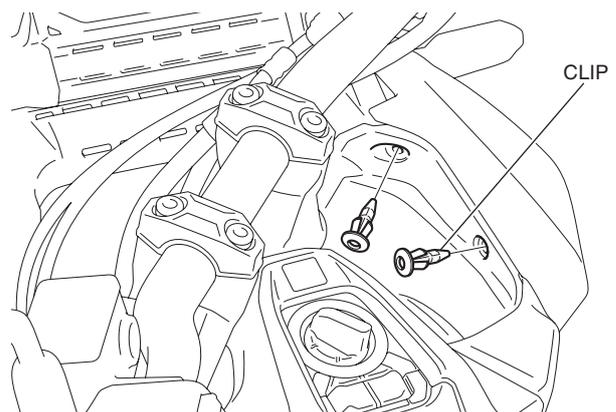


5. Remove the right front side cover A as shown.  
 <Right side>

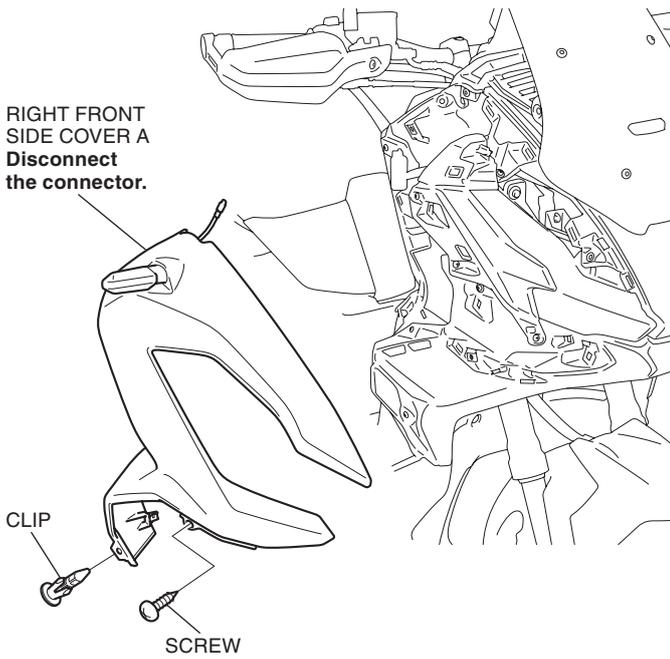


6. Remove the tape as shown.  
 <Right side>

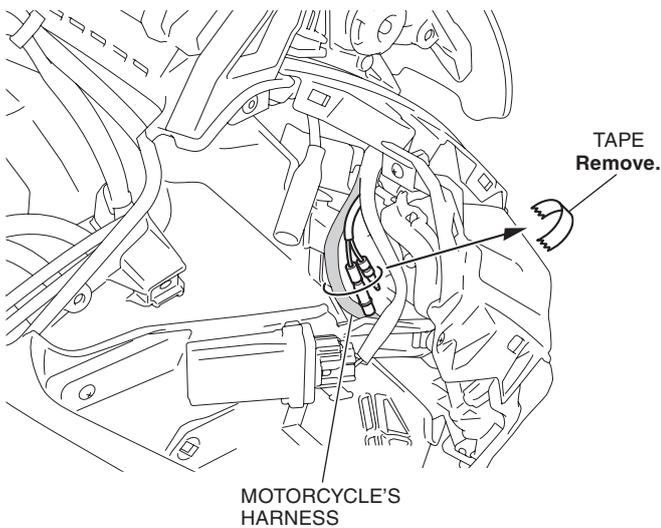


7. Install the clip nut as shown.

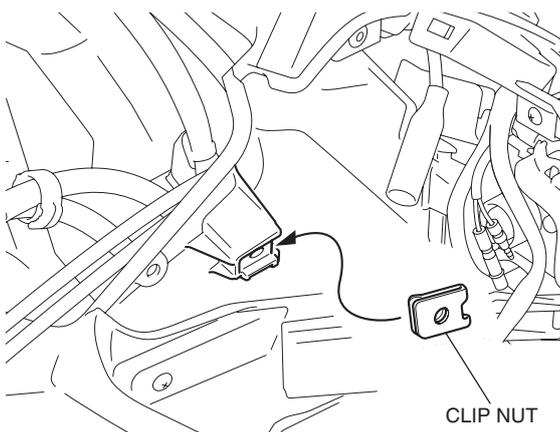


8. Install the buzzer as shown.

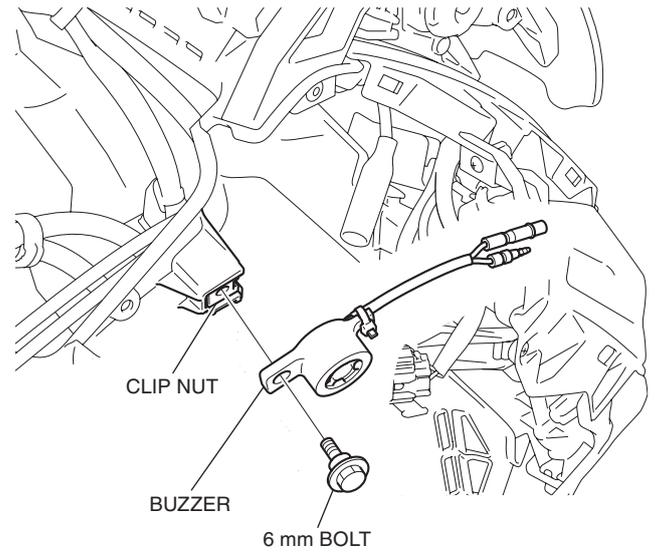

9. Connect the buzzer harness as shown.

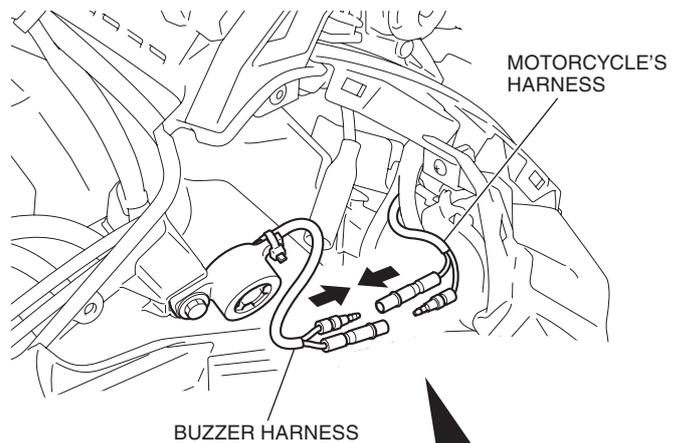


After connecting the harnesses, wind the electrical tape onto them as shown.

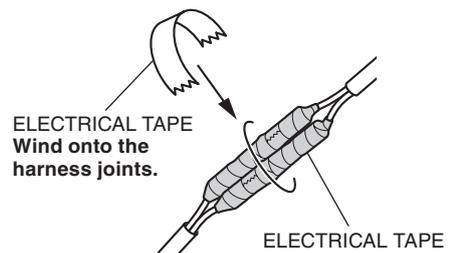


10. Install the motorcycle's parts in the reverse order of removal.
- Confirm that any wire harness is not caught or too tight.
11. Check the lights for proper operation.

## THE ALARM FUNCTION SETTING (UNLOCK)


1. Turn off the main switch, and connect the inspection adapter (07XMZ-MB0101) to entry connector of the motorcycle.

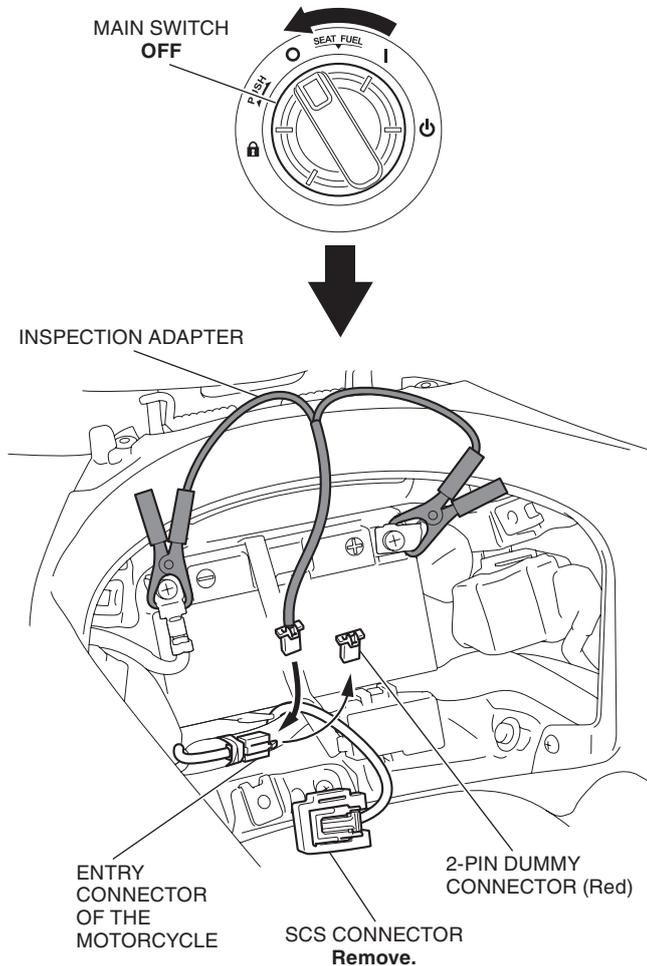

2. After step 1, press the A button  of the Honda SMART Key within 2 minutes.
  - The smart indicator and FACE LED light up.

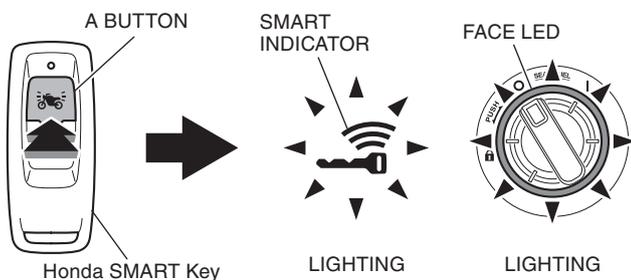

3. After step 2, press the A button on the Honda SMART Key 5 times continuously within 2 minutes.
  - The smart indicator and FACE LED blink twice each and the buzzer sounds twice.

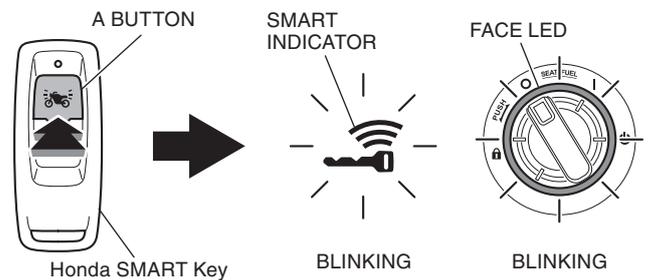


4. Remove the inspection adapter from the entry connector.
5. Confirm that the alarm sounds by the following operations. (Work on level ground.)
  - a) Tilt the motorcycle from the vertical state.
  - b) Raise the motorcycle vertically from the tilted state.
  - c) Remove the motorcycle from the main stand.
  - d) Push the motorcycle and walk.
  - If the operation does not sound the alarm, check that the connector is not disconnected and the battery voltage is not low.

## STOP THE ALARM FUNCTION (LOCK)


- It cannot be set unless the alarm is in the **UNLOCK** state.

- Turn off the main switch, and connect the inspection adapter (07XMZ-MB0101) to entry connector of the motorcycle.

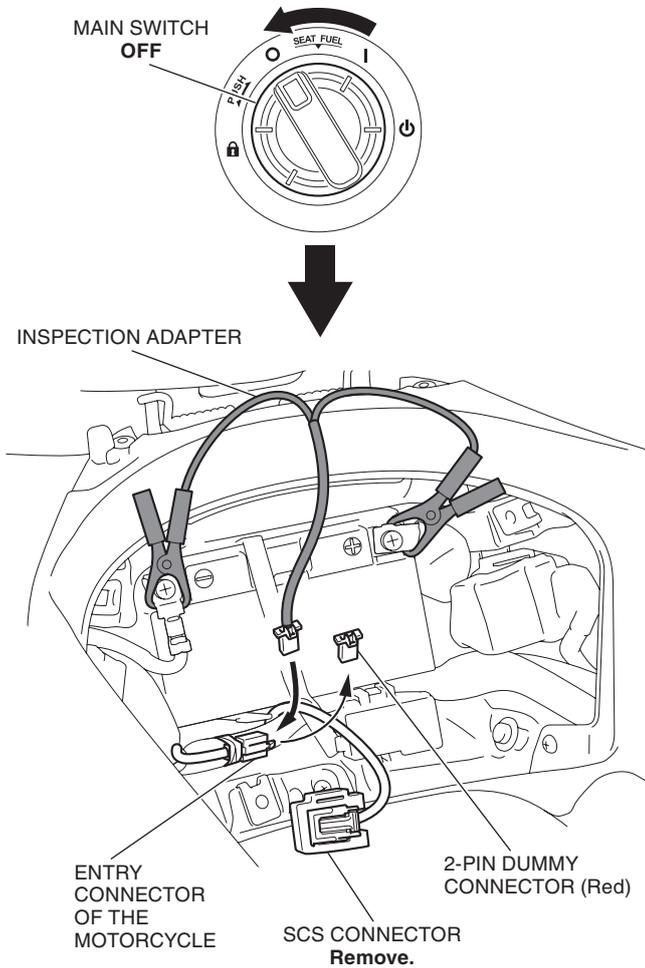


- After step 1, press the A button  of the Honda SMART Key within 2 minutes.

- The smart indicator and FACE LED light up, and the buzzer sounds twice.

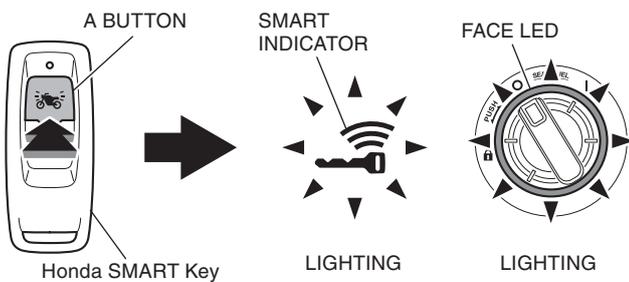

- After step 2, press the A button on the Honda SMART Key 5 times continuously within 2 minutes.

- The smart indicator and the FACE LED blink twice each.

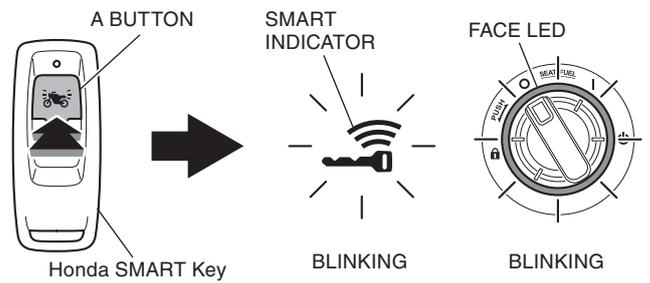

- Remove the inspection adapter from the entry connector.